

## Carsonite<sup>®</sup> Visi-Post<sup>™</sup> and LineMarker<sup>™</sup> Post Installation

**CAUTION:** Always wear proper safety equipment. Read instructions completely before installation.

### Tools required:

- \*Post hole digger or power auger
- \*Tamping bar

**1.** Use a post hole digger or a powered auger to core a 5-inch to 6-inch diameter hole to the appropriate depth. **See Figure 1.** Use the table to determine the appropriate burial depth.

**2.** Set the post in the hole. Be sure the post's graphics face the desired direction. The post must extend to the bottom of the hole. **See Figure 2.**

**3.** Backfill and tamp. Push loose dirt in place around the installed post a little at a time and tamp frequently. **See Figure 3.**

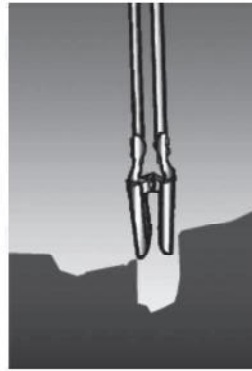


Figure 1

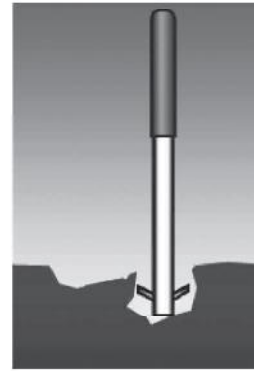


Figure 2



Figure 3

### SUGGESTED BURIAL DEPTH

Marker Overall Length	Above-Ground Length	Burial Depth
5.5' (66")	4' (48")	1.5' (18")
6' (72")	4' (48")	2' (24")
7' (84")	5' (60")	2' (24")
8' (96")	6' (72")	2' (24")
9' (108")	7' (84")	2' (24")
10' (120")	7' (84")	3' (36")
11' (132")	8' (96")	3' (36")
12' (144")	9' (108")	3' (36")